

AT1103M X-ray Radiation Dosimeter

**Energy range
from 5 keV
to 160 keV**



Unique highly-sensitive device for measuring radiation exposure on crystalline lens, mucus membranes and skin.

Measures directed dose equivalent rate of continuous X-ray radiation with energy from 5 keV.

Operating principle

NaI(Tl) $\varnothing 9 \times 2$ mm scintillator with beryllium window is used in the dosimeter as an X-ray detector.

Method of measuring directed dose equivalent rate is based on determining of instrument spectrum and its non-continuous weighing with normalization per dose rate unit, while the energy dependence is corrected.

Applications

- Monitoring accepted levels of X-ray radiation with low-energy and intensity from video display units, night vision devices, oscillographs, TV receivers, microwave emitters, ion implanters, search and medical continuous X-ray apparatus
- Certification testing of instruments and equipment with sources of unused X-ray radiation, protective measures management
- Dosimetric control during work with ^{55}Fe , ^{239}Pu , ^{109}Cd , ^{125}I , ^{129}I , ^{241}Am , ^{57}Co , ^{139}Ce etc. isotopes.

Features

- Search for X-ray and low-energy gamma radiation sources
- Quick accommodation to changes in radiation level
- Sound and visual alarm in case threshold level is exceeded
- Memory function for 100 measurement results
- Integrated system for measurement path LED stabilization, so there is no need for check radioactive source
- Analogue-to-digital converter for 256 channels
- Measurement results can be written, stored and transmitted into PC using RS 232 interface
- Dust and splash-proof design
- Not for natural background measuring
- Background component correction during measuring



ATOMTEX[®]


INSTRUMENTS AND TECHNOLOGIES FOR NUCLEAR
MEASUREMENTS AND RADIATION MONITORING

AT1103M X-ray Radiation Dosimeter

Specification

Detector	Nal(Tl) Ø9x2 mm with beryllium window
Directional radiation dose equivalent rate measurement range	50 nSv/h ... 100 µSv/h
Directional radiation dose equivalent measurement range	50 nSv ... 5 mSv
Intrinsic relative measurement error	±15% max.
Registered X-ray radiation energy range	5 ... 160 keV
Sensitivity for ²⁴¹Am	400 cps/µSv·h ⁻¹
Response time for dose rate change from 1 to 10 µSv/h	≤2 s (accuracy error ≤±10%)
Energy dependence relative to ²⁴¹Am in the following range:	
5 keV ... 60 keV	±35%
60 keV ... 160 keV	±30%
Calibration error for ²⁴¹Am	±5% max.
Detectable ²⁴¹Am activity at 0.5 m distance for period <2 s	1000 kBq (27 µCi)
Maximum statistical load	6·10 ⁴ s ⁻¹
Burn-up life	≥100 Sv
Operation mode setup time	≤5 min
Power supply	Internal rechargeable Ni-MH battery or AC power adapter
Continuous run time	≥24 h
Working temperature range	0°C ... +40°C
Relative air humidity with temperature ≤35°C without moisture condensation	≤90%
Protection class	IP54
Overall dimensions	233x85x67 mm
Weight	0.9 kg

Design and specifications are subject to change without notice

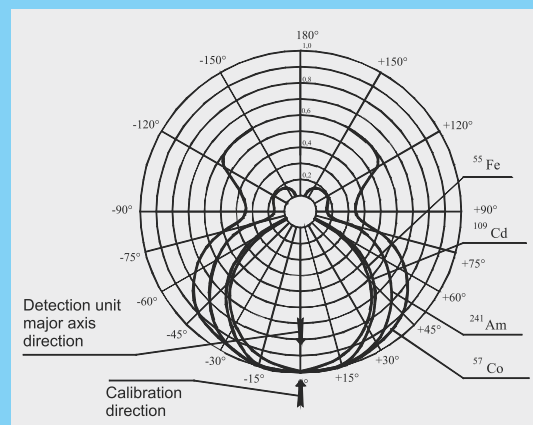

Normal relationship between dosimeter sensitivity and radiation incidence angle

AT1103M X-ray radiation dosimeter meets Safety standard requirements:
IEC 61010-1:2001

EMC requirements:
EN 55011:2009
IEC 61000-4-2:2008
IEC 61000-4-3:2008

AT1103M X-ray radiation dosimeter has the pattern approval certificates of Republic of Belarus, Russian Federation, Ukraine and Kazakhstan.



ATOMTEX®

<http://www.atomtex.com>

5, Gikalo st., 220005 Minsk,
Republic of Belarus
Tel./fax: +375 17 2928142
E-mail: info@atomtex.com



ENI
Corporate Member
of European
Nuclear
Society